


**VALVE USED TO STOP COUNTER BALANCE
IN POSITION IF AIR IS LOST**

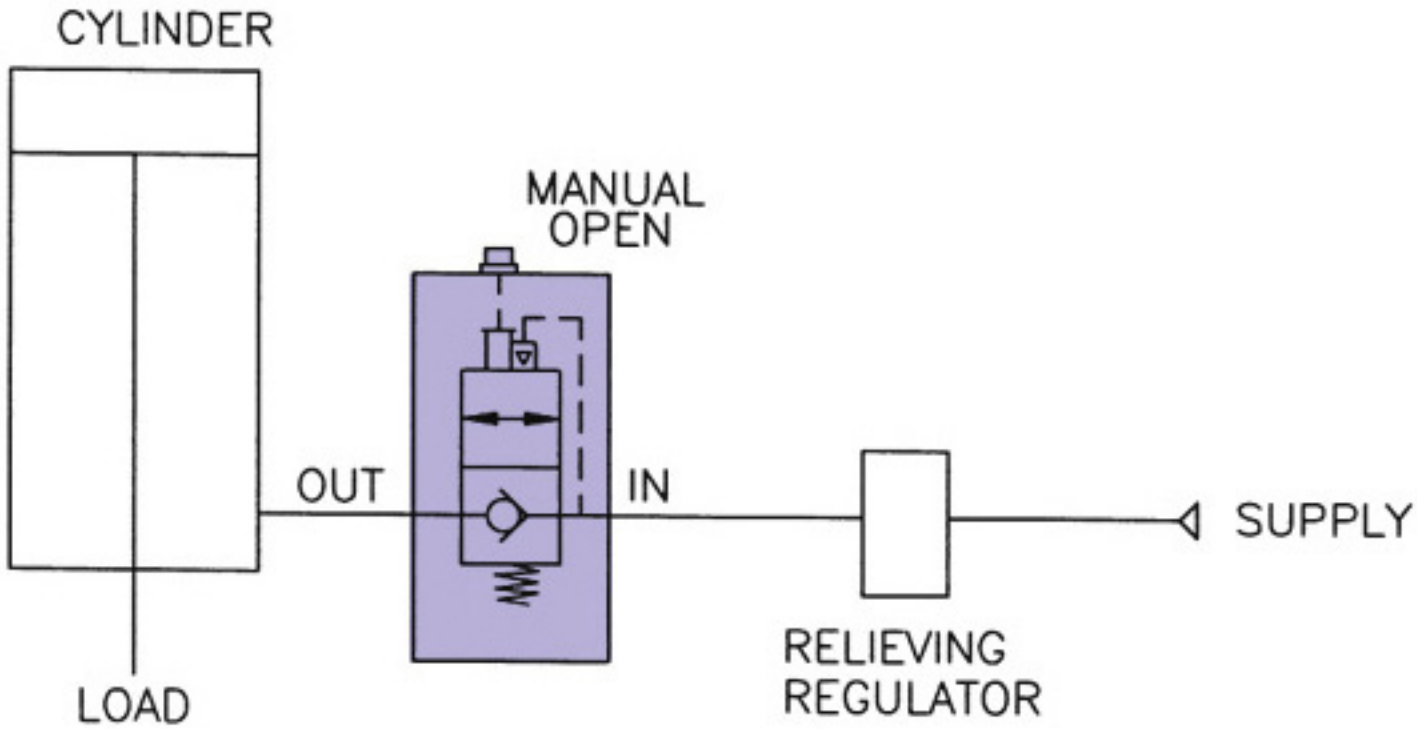

**TWO VALVES USED TO STOP LIFT GATE IN
POSITION IF AIR IS LOST**

